

USER MANUAL



	Product Number	Oven Brand	Oven Model
	FS-1112M	MerryChef	402S
	FS-1212U	All Brands	Microwave Only
	FS-1614A	Amana	AXP
	FS-1514T	Turbochef	Tornado
	GR-1112M	Merrychef	402S
	GR-1514T	Turbochef	Tornado
	GR-1614A	Amana	AXP
	RR-1212U	All Brands	Microwave Only

Please fully read this User Guide carefully, follow all instructions and retain it for future reference.

CONTENTS

- Usage/Safety Instructions
- Cleaning Instructions
- Disassembly/Reassembly Instructions
- Repair/Service Information
- Limited Warranty

Silar® MICROWAVE HEATABLE CERAMIC PRODUCTS

USAGE / SAFETY INSTRUCTIONS

Whenever you remove the rack from the microwave oven, use caution to prevent personal injury from occurring. The rack will maintain high temperatures for a period of time after the microwave oven has been turned off.

- Use rack only in Microwave Oven for which it is intended.
- Wear insulated mitts whenever inserting or removing food from the rack.
- Use metal tongs or a metal paddle to insert or remove food.
- Do Not remove rack from oven while hot
- Do Not immerse in water while hot
- Do Not clean while hot
- Do Not cook raw proteins
- Do Not drop
- Do Not use damaged rack (cracked, broken, or loose rods can cause damage or injury. Repair before using)

Important:

CRACKED, BROKEN, OR LOOSE RODS MAY CAUSE DAMAGE OR INJURY.
REPAIR BEFORE USING.

CLEANING INSTRUCTIONS

Silar® Microwave Heatable Ceramic Products are extremely durable and under normal usage only require cleaning once a day. BEFORE REMOVING YOUR SILAR® MICROWAVE PRODUCT FROM THE OVEN, BE SURE THAT BOTH THE OVEN AND SILAR® MICROWAVE PRODUCT HAVE COOLED FULLY.

Important:

- REMOVE RACK FROM OVEN PRIOR TO CLEANING
- APPLY CLEANERS ONLY WHEN RACK IS REMOVED FROM OVEN
- AFTER CLEANING, THOROUGHLY RINSE OFF ALL CLEANERS IN WATER BEFORE RE-USE
- USE PAPER TOWELS OR CLOTH TO DRY RACK. AIR-DRY IS ALSO ACCEPTABLE.
- DO NOT USE THE MICROWAVE TO DRY THE RACK

GENERAL CLEANING:

Remove cooled rack from oven and place in sink. Use a mild dishwashing detergent, and scrub with a scouring pad or nylon brush. Thoroughly rinse off and allow to dry. Place rack back in oven after rack has dried completely.

HEAVILY SOILED CLEANING:

Remove cooled rack from oven and place in sink. Spray on oven cleaner and allow to soak for 30-60 minutes. DO NOT apply oven cleaner on Silar® with rack in oven. Clean with a nylon or medium duty brass wire brush. Before reuse, thoroughly rinse off all oven cleaner from rack with warm water and allow to dry.

For thorough cleaning, rack may be disassembled.


The Silar® rack is dishwasher safe.



DISASSEMBLY



REASSEMBLY

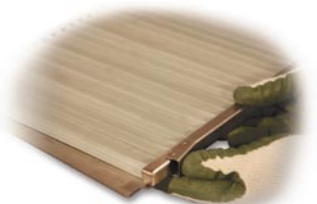

DISASSEMBLY / REASSEMBLY INSTRUCTIONS

Important:

- ENSURE RACK HAS COOLED FULLY BEFORE REMOVAL FROM OVEN
- REMOVE RACK FROM OVEN
- WEAR PROTECTIVE GLOVES AND EYE PROTECTION

DISASSEMBLY

- 1.** Insert flat blade screwdriver between channel and clip and gently pry apart (ONLY REMOVE CLIP(S) FROM ONE SIDE OF THE RACK).
- 2.** Remove clip (GR-model 1 clip, FS-model 2 clips) and channel from one side of rack.
- 3.** Remove Silar® ceramic rods

REASSEMBLY

- 1.** Insert all Silar® ceramic rods back into channel
- 2.** Insert remaining channel
- 3.** Insert clip(s) and gently push until seated on channel

REPAIR/SERVICE INFORMATION

Your Silar® rack is designed to last for many years and will not break unless an accident, misuse, or abuse occurs. If a rod were to break, repair kits are available which will include three rods and four clips.



For service please contact your dealer or Advanced Composite Materials, LLC during normal business hours Monday thru Friday at 864-877-0123 ext. 300.

Silar[®] MICROWAVE HEATABLE CERAMIC PRODUCTS

SILAR[®] MICROWAVE HEATABLE CERAMIC PRODUCTS LIMITED WARRANTY

LIMITED WARRANTY

Advanced Composite Materials, LLC ("ACM") warrants to you, the purchaser, that when operated and maintained according to instructions attached to or furnished with the Product, the Silar[®] Microwave Heatable Ceramic product ("Product") will be free from defects in material and workmanship during the Warranty Period, subject to the terms and conditions set forth herein. The "Warranty Period" is twelve (12) months from the date the Product is purchased by the original purchaser. THIS LIMITED WARRANTY IS EXCLUSIVE AND IS IN LIEU OF AND EXCLUDES ALL OTHER WRITTEN OR ORAL WARRANTIES OR CONTRACTUAL AGREEMENTS, WHETHER EXPRESS OR IMPLIED BY LAW OR OTHERWISE, INCLUDING IN THIS EXCLUSION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

WARRANTY EXCLUSIONS

ACM does not warrant that the Product will meet your specifications or needs. You acknowledge that you are solely responsible for the selection of the Product and determining the suitability of the Product for your needs. ACM is not responsible for damage arising from failure to follow instructions relating to the Product's use. This Limited Warranty does not apply to: (a) damage caused by accident, alteration, abuse, misuse, flood, fire, earthquake or other external causes; (b) damage caused by operating the Product outside the permitted or intended uses as described by ACM; (c) cosmetic damage, including but not limited to scratches and dents, that does not otherwise affect the Product's functionality or materially impair its use; or (d) damage to the microwave oven where the Product is installed. In no event will ACM be liable, whether as a result of breach of contract, warranty, tort (including negligence) or other grounds, for special, consequential, incidental, liquidated or punitive damages including, but not limited to, loss of profits or revenue, loss of use of the Product, cost of capital, cost of substitute product, facilities or services, downtime costs, or claims of customers of the user of the Product for such damages.

WARRANTY SERVICE, EXCLUSIVE REMEDY

ACM will be solely responsible for determining whether or not the Product is defective. If a defect in the Product arises and a valid claim is received within the Warranty Period, ACM will, at its option, either (1) repair, or designate a service company to repair, the defect at no charge, using new, refurbished or rebuilt replacement parts, (2) replace the Product with Product that is new, refurbished, rebuilt or which has been manufactured from new or serviceable used parts, and that is at least functionally equivalent to the original Product, or (3) refund the purchase price of the Product. ACM may request that you replace defective parts with user-installable parts that ACM provides in fulfillment of its warranty obligation. Repaired or replacement parts or Product will be covered by this Limited Warranty for the balance of the Warranty Period. Defective Product and parts will become the property of ACM. This paragraph states ACM's sole and exclusive obligation and liability and your sole and exclusive remedy under this Limited Warranty. ACM shall not be responsible for a failure to provide warranty services due to causes beyond ACM's control.

WARRANTY CLAIMS

Claims under this Limited Warranty must be reported to ACM during our normal business hours at the following number: 864-877-0123 Extension 300, or by e-mail at silar@acm-usa.com or by contacting your authorized dealer/distributor.

Advanced Composite
Materials, LLC

1446 S. Buncombe Rd.
Greer, SC 29651
864-877-0123
Fax 864-879-6615
silar@acm-usa.com
silarwave.com